



TOWING HITCH ASSEMBLY

Before towing your Airstream Travel Trailer there are a few key components needed. First, your tow vehicle will need to be equipped with a hitch receiver and 7-way plug. The below guide will cover the components to help keep you safe while towing your Airstream Travel Trailer.



TRAILER HITCH CLASS CAPACITIES

There are many different types of hitches and receivers used for towing a trailer. Each type of trailer hitch has a unique purpose, as well as its own set of capacities and sizes. The below chart will help determine the correct hitch for your trailer.

	Gross Trailer Weight (GTW)	Tongue Weight (TW)	Receiver Size
CLASS I	1,000-2,000 LBS	100-200 LBS	1-1/4"
CLASS II	2,000-3,500 LBS	200-525 LBS	1-1/4"
CLASS III	3,500-8,000 LBS	300-800 LBS	2"
CLASS IV	5,000-12,000 LBS	500-1,200 LBS	2"
CLASS V	10,000-25,000 LBS	1000-4000 LBS	2", 2-1/2", 3"

BRAKE CONTROLLERS

Brake controllers are an essential part of a towing system. A brake controller syncs the brakes of your trailer with your tow vehicle, which allows the tow vehicle and the trailer to decelerate at the same rate. Brake controllers are available in both wired and wireless designs.



WEIGHT DISTRIBUTION HITCH

A Weight Distribution Hitch System is designed to improve steering, braking, and provide a smooth, level, towing experience. A Weight Distribution Hitch such as the Equal-i-zer also provides 4 points of sway control to keep you safe while towing.



Without Weight Distribution Hitch



With Weight Distribution Hitch

Benefits of using Weight Distribution Hitch

- ✓ Smooth & Level Towing
- ✓ Improved Steering
- ✓ Improved Braking
- ✓ Less Trailer Sway
- ✓ Safer Experience

Have Questions? We are here to help.
Call Us: 800-265-9019
www.ColonialAirstream.com

